



## INVERTER RELAY

### ON-VEHICLE INSPECTION

#### 1. INSPECT INVERTER RELAY

- (a) Check the resistance.
  - (1) Using an ohmmeter, measure the resistance between the terminals.

#### Standard Resistance

Tester Connection	Specified Condition
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the inverter relay.